

ORBIS BulkPak® Spare Parts

HDR7848-34

This guide will show you the replacement parts list for the HDR7848 series. In addition, step-by-step instructions are available to replace hinges and latches as well as disassembly. If you have any questions regarding pricing or repair options, please reach out to your ORBIS Sales Representative.



Description	Item #
1 - Solid Base	0902072
2 - 48" Side Solid	0903007
3 - 48" Access Door Assembly	0903020
4 - 78" Side Solid	0903393
5 - 78" Access Door Assembly	0903400


48" Panel Rod Kit (Set of 4 yellow rods & 8 cap screws)	0907374
78" Panel Rod Kit (Set of 4 yellow rods & 4 fasteners)	0907339
48" Side - Access Door Hinge Pin Kit (Set of 12 yellow pins)	0904439
78" Side - Access Door Hinge Kit (Set of 3 yellow hinges & 3 hinge pins)	0907377
Panel Latch Kit (Set of 2 white latches & 8 fasteners)	0903450
48" Side - Access Door Latch Kit (Set of 2 yellow latches & 8 fasteners)	0903474

ORBIS BulkPak® XXLPak

HDR7848

Required Tools

- 1 Pliers
- 1 Rubber Mallet
- 1 Flat Head Screwdriver

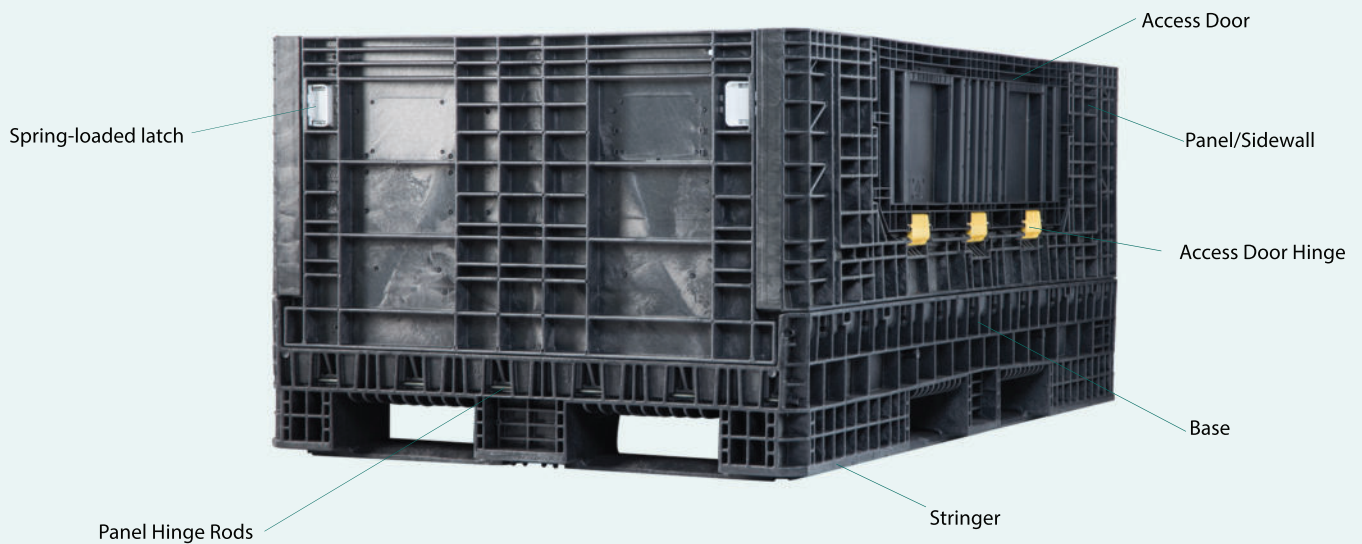

Sidewall Repair



1. Use a flat head screwdriver to push the rod towards the open hole at one side of the container.



2. Gently move the rod through with your hands. Wear gloves to protect your fingers from glass splinters.



3. Push the rod through the hole to remove it. Once the rod is fully removed from the container, you can lift off the side wall and replace it if necessary.



4. Push a new rod through the hole and move it with your fingers to put it into position. To ensure proper functionality, push the rod through completely until it reaches the other end of the bin.

ORBIS BulkPak® XXLPak

HDR7848


Hinge Repair Long Side



1. Insert a flat-head screwdriver underneath the hinge pin and move it out of its location. Repeating this step for all hinges will disengage the door and it will be able to be removed.



2. Use the flat-head screwdriver to punch out the hinge from the inside of the container. Remove the hinge

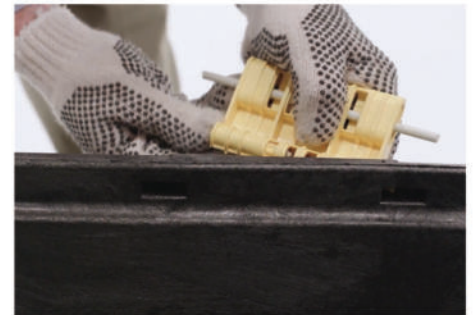


3. Slide the new hinge into the hinge location. Open and close the access door to ensure correct fit.

Hinge Repair Short Side



1. Insert the flathead screwdriver on the back side of the hinge and move the hinge pin out of its location.

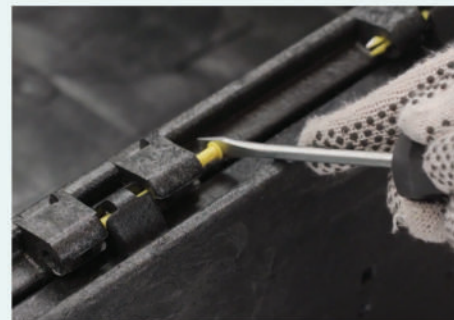

2. Use a flathead screwdriver to push the new pin into the hinge location.

Latch Repair



1. Insert the flat-head screwdriver in between the latch and the tab that is holding the latch in place.



2. Push the latch over so it disengages from the tab and the latch will be able to be removed. Remove the latch.



3. Put the new latch in place. Push down on the latch and it will snap into place. Latch replacement is the same for the sidewall and the access door.