


Handling Guidelines for ORBIS HDB BulkPak® Family



ORBIS GitterPak®
1200 x 800
ORBIS HDB1210
1200 x 1000

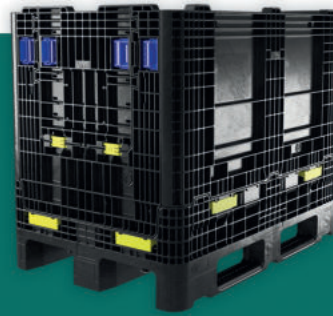

In order to erect the container, grab the side wall with two fingers and pull it into position. There is an opening at the side walls specifically intended for this purpose. Repeat the process on the opposite side.



Erect the two short side walls one after the other by grabbing the opening and pushing the wall into position. The blue latches of the short side walls will snap into the openings at the inner side of the long side walls. The side walls need to be erected evenly to a centered position to ensure that they snap-in smoothly.

PLEASE NOTE:

- Please make sure all side walls are erected in an upright position.
 - The blue latches only need to be operated when folding the container, not when erecting it.
- You might need to use some force and/or swing to snap the walls into place.